

**Included BKLEEN bidet toilet seat accessories**



**VERY IMPORTANT**

**To avoid leaks, we always recommend replacing the existing water supply hose.**



**Included T-joint with 1/2" male and female threads**



**Included 304 adapter with 3/8" female and 1/2" male threads**





**Included 304SS adapter with 1/2" female and 3/8" male threads**



## Two options for installation of T-joint

Option A – at water source valve

Option B – at toilet tank entry

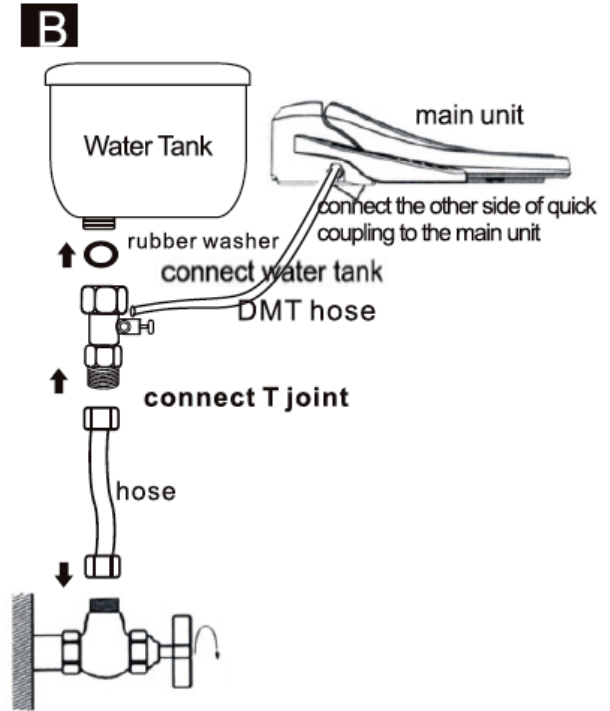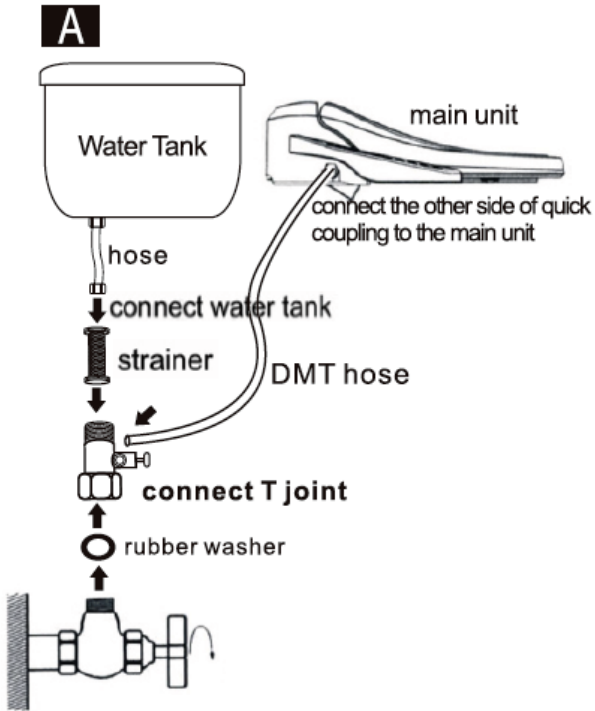

## Option A - when the water tank entry connector is 7/8"

Purchase a new water supply hose of the appropriate length from 7/8" toilet to 1/2" FP valve and connect directly to the 1/2" male end of T joint.



You can also purchase a new water supply hose of appropriate length from 7/8" toilet and 1/2" COMP to valve and connect using the 304SS adaptor to the 1/2" male end of T joint.





**For option A - Confirm or replace the water supply valve is 1/2" NOM COMP INLET**



**NOTE: We recommend taking all the connections with you to the hardware store to test the correct fit on all the threads.**

### **Option B – where the toilet tank entry is 1/2"**

**Connect the T joint valve directly to the male end of water tank and reuse or replace existing water supply hose. If needed, use the 304 adapter for a better connection with the female end of the supply hose.**